
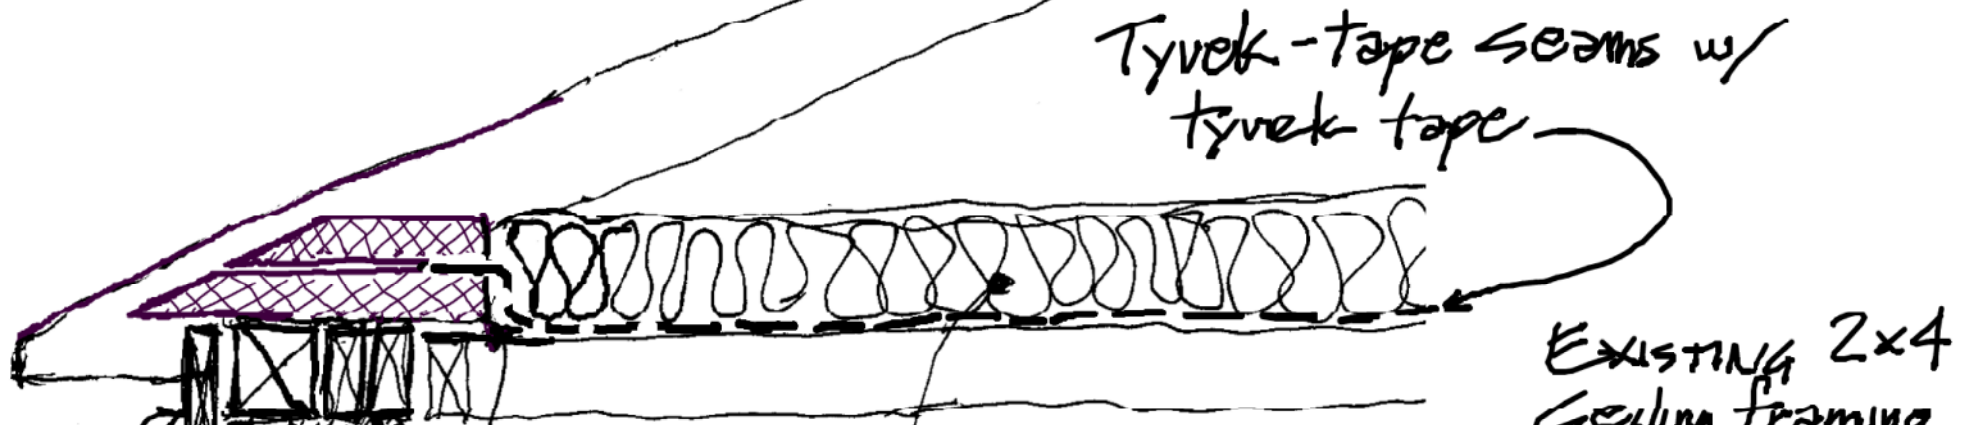


SK-2  
2011-07-06

NEW CORNICE TRIM  
• RIM JOIST BLOCKING  
• INSULATION

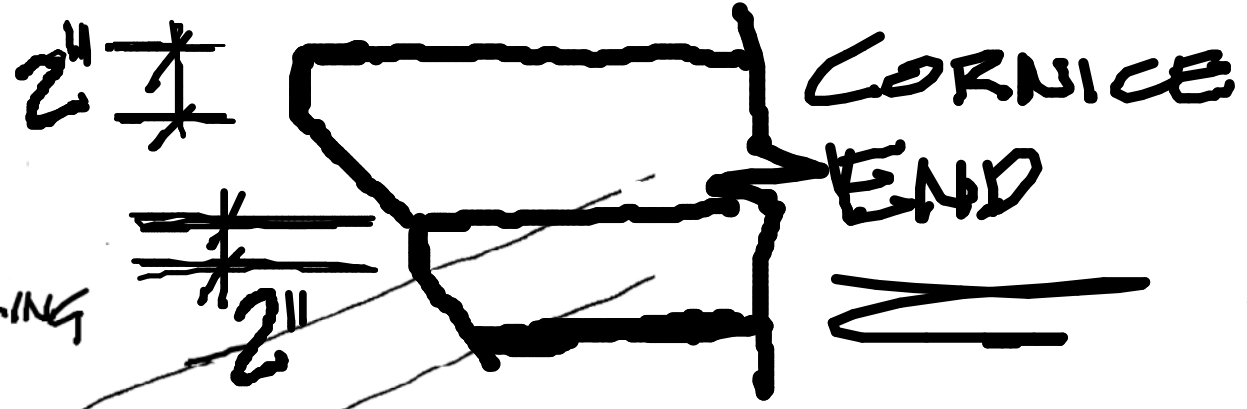

NEW 2x8's  
Cornice TRIM  
Mortar under new blocking

New 6" deep batt insul paper face down.  
Form sheets bevel end to match roof slope length as necessary to allow installation. 12" min. Caulk btw sheets & to rim joist

Secure each layer of blocking to the with min 3" gal deck screws 12" oc

Blocking btw rafters pressure treated 2x4 - cut as necessary to fit into place. Install w/screws.